

# ANILEATOR™ FOGGER

## ANILEATOR™ FOGGER (#082550)

APE #	Part #	Product Description
082501	1	Tank, 1-gallon (62130-10)
082502	2	Cap Assembly, blue (62135-1)
082503	3	O-Ring (10160-343)
082504	4	Clevis, blue plastic (62131-1)
082607*		Strain, rel., Power Cord 115 VAC (20180-3)
082505	5	Strain, rel., Power Cord 230 VAC (20180-4)
082506	6	Power Cord Assembly 115 VAC (62031-1)
082551		Power Cord Assembly 230 VAC (62051-1)
082507	7	Screw, 10-24 x 3/4 stainless steel (62361-2)
082508	8	Clip, xmas tree (62316)
082509	9	Washer, black plastic (62228)
082510	10	Hand Grip (29509)
082511	11	Housing, blue (62001-60)
082604*	12	Rocker Switch (62006-1)
082513	13	Boot, Rocker Switch (39027)
082514	14	Nozzle Assembly, blue (62357-54)
082610*	15	Screw for Motor 10-24x3/8 (9425178)
082516	16	Washer, #10 lock, INTO Motor Cover (121801)
082517	17	Cover, motor (62027)
082609*	18	Blower Gasket, die cut foam (62366)
082606*	19	Blower 115 VAC (62013)
082519		Blower 230 VAC (62026)
082612*	20	Rear Housing Closure, blue (62002-54)
082521	21	Clamp, carry strap (11719)
082522	22	Screw, 10-16 x 1.25 stainless steel (62160)
082523	23	Screw 10x3/4, stainless steel high-low thread (62161)
082524	24	Clamp, plastic (86690)
082525	25	Brush mechanism 115 VAC (62013-3)
082555		Brush mechanism 230 VAC (62026-3)
082526	26	Nut, 3/8-16, square (62367)
082643*	27	Filter, air intake (62124)
082631*	28	Washer, friction (62083)
082529	29	Label ID, Anileator™ 115 VAC (62151-9)
082557		Label ID, Anileator™ 230 VAC (62151-10)
082552	30a	Spring, anti-crimp stainless steel (74312-3)
082530	30b	Tube, blue (62227)

\* interchanges with Hurricane™ Fogger

APE #	Part #	Product Description
082531	31	Label, knob insert (58583)
082532	32	Valve Assembly, lbue (62132-1)
082533	33	Clamp, plastic (21158)
082534	34	Washer, stainless steel square retainer (39090)
082535	35	Orifice, Flow Limiting (10247-36)
082630*	36	Locking Handle, blue (62117)
082537	37	Washer, locking handle (62128)
082538	38	Tube, .312 (62054-1)
082539	39	Filter, bronze porous (80408)
082540	40	Label, "Caution/Flow" (62029-1)
082541	41	Label, "Warning" (62057)
082542	42	Label, "Made in USA" (63409)
082543	43	Label, Anileator™ logo (62226)

### **MAINTENANCE**

1. Periodically clean the Formulation Tank using a hot water/detergent solution. Fully open the Machine Valve and operate the machine for 3-5 minutes, flushing the solution through the valve, lines, and nozzle.
2. Examine the electric cord for evidence of damage and replace any damaged cord immediately.
3. After 500 hours of operation, carefully remove the Blower Assembly and examine the brushes and the commutator of the Blower Motor. If brushes or commutator are damaged, replace Blower Assembly.
4. If necessary to disassemble the Machine Flow Valve for cleaning, be careful not to enlarge the metering orifice or damage the taper of the Valve Stem, as this will affect the calibration of the machine.

When ordering spare parts, always refer to the APE # to ensure speedy and accurate parts replacement.